

**凌科自动化**

EIP


FANUC



EIP DI32 DO32 AI8 AO8



1. LAEConfig IO

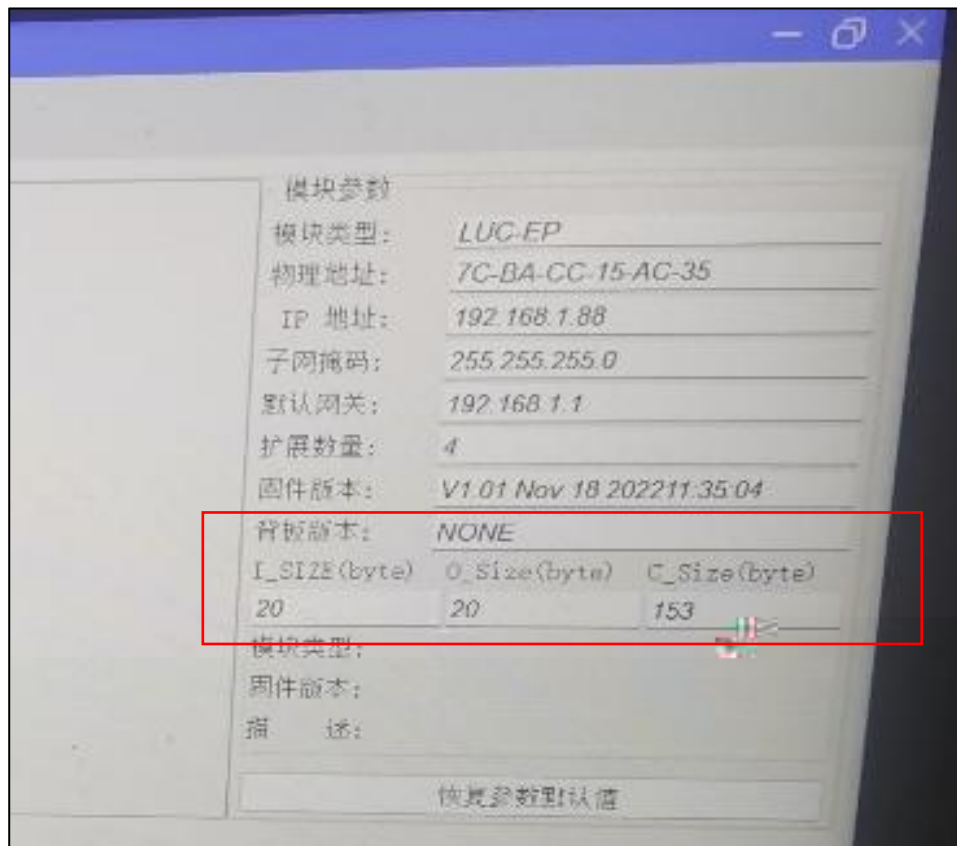



5.

IO

GI/GO

RACK=89 Slot

2

16

GI/GO5

GO #	机架	插槽	开始点	点数
1	0	0	0	0
2	0	0	0	0
3	0	0	0	0
4	0	0	0	0
5	0	0	0	0
6	89	2	33	16
7	89	2	49	16
8	<b>89</b>	2	65	16
9	89	2	81	16
10	89	2	97	16
11	89	2	113	16
12	89	2	129	16
13	89	2	145	16
14	0	0	0	0

GI #	机架	插槽	开始点	点数
1	0	0	0	0
2	0	0	0	0
3	0	0	0	0
4	0	0	0	0
5	0	0	0	0
6	89	2	33	16
7	89	2	49	16
8	<b>89</b>	2	65	16
9	89	2	81	16
10	89	2	97	16
11	89	2	113	16
12	89	2	129	16
13	89	2	145	16
14	0	0	0	0

Slot2

Slot2

Slot2

